


INSTALLATION INSTRUCTIONS

REGUPOL EQUILINE ALLROUND

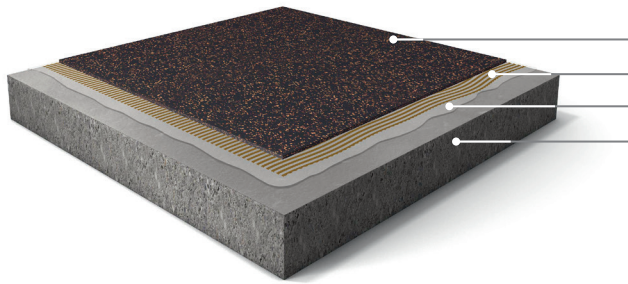

Installation on bound sub-bases

REGUPOL equiline allround

Adhesive bed

Sealing (optional)

Concrete or asphalt sub-base

1. General information

The installation instructions below assume the necessary technical and craftsmanship standards for this work. The installation instructions are based on **REGUPOL's** current knowledge and will be modified as necessary. Neither the manufacturers nor dealers or distributors of **REGUPOL equiline allround** flooring have any direct influence on the correct installation and processing of the materials used. For these reasons, these installation instructions can only be regarded as non-binding and **REGUPOL** can accept no liability for the result of the work.

Responsibility for the correct condition of the supplied **REGUPOL equiline allround** flooring lies of course with **REGUPOL**, provided that no alterations or damage by third parties have taken place from the time of shipment onwards. In this regard, please refer to our general terms and conditions of sales and delivery.

REGUPOL equiline allround is resistant to liquids and sunlight, but should, however, be stored in an environment that protects it from moisture and UV rays before installation. The flooring should also be protected from chemicals, oils, grease, etc. In addition to these installation instructions, the processing instructions and, if applicable, the safety data sheets of the adhesive manufacturers and the manufacturers of other auxiliary materials and accessories must be observed.

2. Sub-base

The prepared sub-base must meet the requirements of the respective national norms and standards. **REGUPOL equiline allround** flooring can be installed on a variety of sub-bases (screed, concrete, wood, asphalt, etc.). However, these sub-bases must be permanently dry, pressure and tension resistant, level, clean, load bearing and free from cracks, wax, solvents and paints, oil, grease, sealants and after-treatment agents, adhesive residues and other foreign bodies. The sub-base's residual moisture content must meet the requirements of the adhesive. Suitable barrier layers must be agreed with the adhesive manufacturer for each specific project.

The sub-base must be level and should meet the increased requirements for finished floor surfaces in compliance with DIN 18202 Part 5, line 4.

3. Material inspection

REGUPOL equiline allround flooring is delivered packed in foil and labelled appropriately. An inspection of the individual rolls must be carried out before installation begins to make sure they are complete and free from any defects.

In general, any claims for compensation are only possible for goods which have not been installed or cut.

Slight deviations in colour and decor in **REGUPOL equiline allround** flooring from different production batches cannot be ruled out completely. Any defects must be reported to the manufacturer immediately, stating the order and batch number as well as a description of the defect before installation begins.

4. Recommended installation

Once the sub-base has been properly prepared, all rolls supplied for the intended installation area must be laid out unprocessed and free of tension (roll out the rolls completely without cutting to size). The floor covering can now acclimatise for a period of approx. 8 hours at a constant room temperature of between approx. 18 °C to approx. 25 °C. In the next step, the individual strips are cut to size with a standard carpet knife (cutter) and positioned precisely.

Each sheet to be installed is folded back halfway in order to apply the adhesive bed to the appropriate section of clean substrate. Here, the instructions of the adhesive manufacturer, relevant for the specific product being used, must be taken into account. The adhesive bed should be applied at right angles to the long side of the sheet using the type of notched trowel recommended by the adhesive manufacturer.

Always make sure that the adhesive is applied evenly over the entire surface.

INSTALLATION INSTRUCTIONS

REGUPOL EQUILINE ALLROUND



The specified flash-off time needs to be adjusted to the local climatic conditions.

REGUPOL equiline allround flooring should be laid onto the adhesive bed, allowing for a maximum 2 mm overlap along the longitudinal joint, and carefully pressed down with a pressure roller. The overlapping longitudinal edge must be carefully pressed flush with the edge of the sheet already in place. The sheets are then installed one after the other. Alternatively, the sheets can be installed with an approx. 5 mm wide longitudinal joint, which is then sealed with a one-component PUR adhesive sealant (e.g. with **REGUPOL** adhesive 40-201). Make sure that no adhesive escapes upwardly from the joint area onto the surface. Should this nevertheless happen, the adhesive must be removed immediately.

If necessary, the joints of the installed sheets should be weighted down with suitable materials (e.g. paving stones).

5. After installation

After installation, the surface should, if at all, only be walked on or otherwise burdened very carefully approximately 24 hours. Rolling loads in particular can displace the sheets before the adhesive has bonded completely.

6. Application advice

If you have any questions about the installation and maintenance of **REGUPOL equiline allround** flooring, feel free to contact your **REGUPOL** customer service advisor:

Tel.: +49 2751 803 141 | equestrian@regupol.eu