


# INSTALLATION INSTRUCTIONS

## REGUPOL PLAYFIX BOLLARD

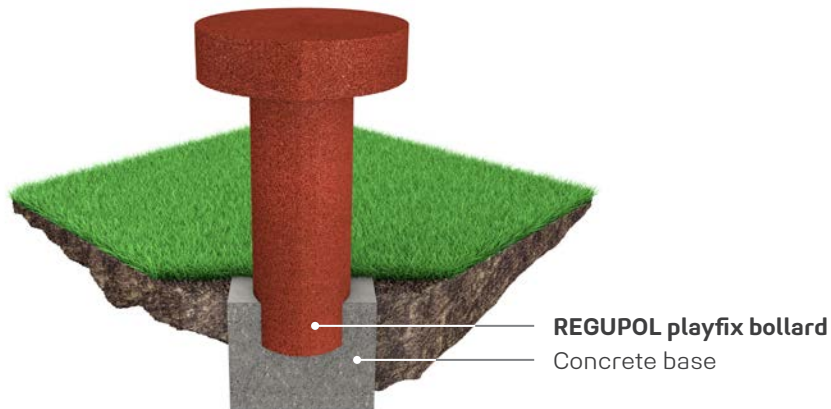

### Installation

Under normal load conditions, **REGUPOL** boundary bollards can be installed directly in the substrate. Place the stem of the bollard approx. 30 cm deep into the ground from the top edge of the floor. The substrate must be compacted after backfilling the hole. In the case of heavy loads, the bollards must also be inserted into a fresh concrete bed (C30/37, XF4 or in accordance with local requirements).

The fresh concrete bed is 40 cm high and 50 cm in diameter. After embedding the stem (also 30 cm deep from the top edge of the usable floor), the concrete must be compacted.

If heights other than those specified are required, the uprights can be cut to the appropriate height with a chainsaw before installation.