


INSTALLATION INSTRUCTIONS

REGUPOL PLAYFIX EDGING

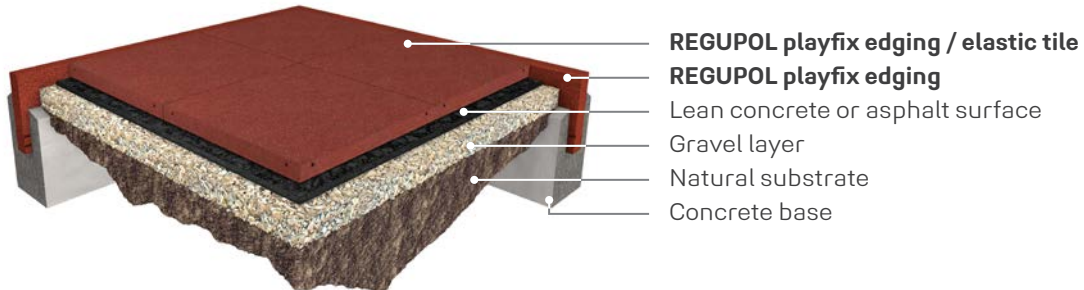

1. Preparation of the base course

A concrete bed (C30/37, XF4 or in accordance with local requirements) is produced on a frost-proof and level substrate.

Dimensions of the concrete bed: height approx. 10 cm, width approx. 20 cm

Once the edging has been installed, the concrete bed is heaped up to form a wedge on both sides and compacted so that the concrete penetrates into the grooves of the edging and thus creates the necessary anchoring for the moulded part.

The height of the concrete wedge to be installed can vary depending on the type of edging or the connecting surface.

2. The installation

The **REGUPOL** edgings are inserted into the concrete bed to a depth of approx. 5 cm in accordance with the height, alignment and force fit. If required, the abutting edges of the edgings can be bonded with a single-component PUR adhesive sealant. The concrete wedge on both sides is then backfilled until the edging still protrudes approx. 10 cm from the concrete. The concrete is compacted.

REGUPOL edgings can also be bent. To do this, the moulded part must be bent and fixed in place with installation bars until the concrete has set. Then the fixations are removed.